


User Manual



Deluxe Model

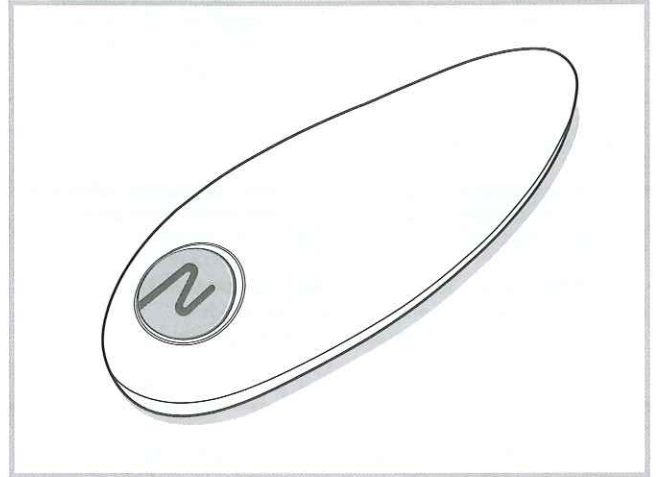


CAUTION

- Read all instructions carefully before using your One Touch™ Can Opener.
- One Touch™ Can Opener is not intended to be used by children.
- DO NOT open pressurized (aerosol type) cans.
- DO NOT open cans of flammable liquids such as lighter fluids.
- Make sure the motor has stopped completely before taking off the bottom cover for battery replacement.
- During battery replacement DO NOT press the switches on the bottom or the button on the top of the One Touch™ Can Opener, to avoid turning the unit on.
- Before cleaning the cutter, remove batteries to avoid accidentally turning the unit on.
- Keep fingers away from cutter at all times.
- Avoid contact with moving parts. Keep hands, hair, jewelry, clothing, etc. away from moving parts during operation to prevent injury and/or damage to the One Touch™ Can Opener.
- To maintain the One Touch™ Can Opener at its optimal condition, DO NOT immerse it in water or any other liquids.
(Please see Care and Maintenance section for cleaning instructions.)
- DO NOT remove any parts of the One Touch™ Can Opener.

SAVE THESE INSTRUCTIONS

The One Touch™ Can Opener is intended for household use only.
Read the following instructions before using for the first time.

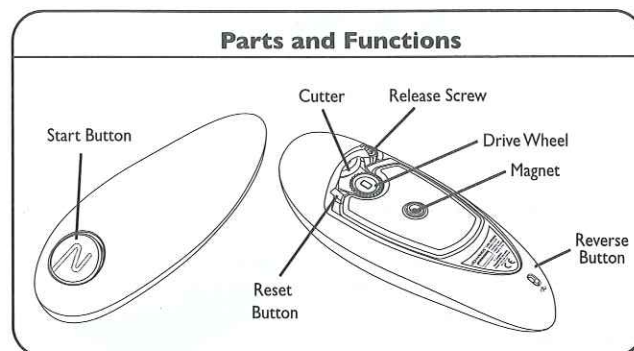


Getting Started

BATTERY INSTALLATION

To install (and remove) 2 AA alkaline batteries into the battery compartment (according to the polarity (+/-) instruction) slide back the bottom cover by holding the unit with the bottom facing up and the narrow end toward you. Place each thumb on each side of the magnet and pull toward you. The battery cover will snap off for easy removal. Replace the bottom cover after the batteries have been installed. (See Fig. 1) Always replace both batteries at once and never mix old and new batteries or batteries of different types.

Note: The cutter will not operate when the bottom cover is removed from the unit.

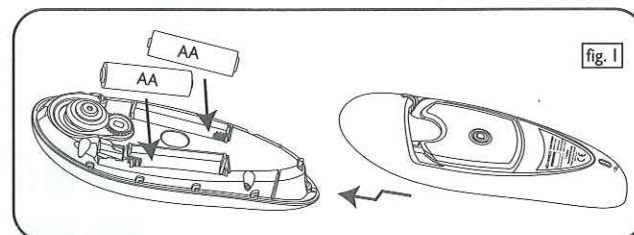

USING THE ONE TOUCH™ CAN OPENER

1. To assure that the cutter is in proper position, press and hold the reset button until the motor stops.

Note: If the cutter is in the correct position, the motor will not start when the reset button is pressed.

2. Place the One Touch™ Can Opener on top of the can with the rim of the can positioned in the groove of the cutter at the bottom of the One Touch™ Can Opener. (See Fig. 2)




Note: The cutter will not operate unless it is positioned correctly on the rim of the can.

3. With the can on a flat surface, press the Start button firmly for about one second and release it once the One Touch™ Can Opener starts to cut the can. (See Fig. 3) The One Touch™ Can Opener will stop automatically. (See Fig. 4)

Note: For cans smaller than 3.5" in diameter, DO NOT attempt to stop or remove the One Touch™ Can Opener until the 20-second cycle is complete and the motor has stopped. For cans larger than 3.5" in diameter, once the initial 20-second cycle is complete and the motor has stopped, firmly press the Start button for about one second and release it when the One Touch™ Can Opener starts to cut the can. DO NOT attempt to stop or remove the One Touch™ Can Opener until the 20-second cycle is complete and the motor has stopped.

4. When the cutting has been completed, lift the One Touch™ Can Opener off the can. For your convenience, a magnet in the center of the One Touch™ Can Opener will pick up the lid as well. (See Fig. 5)

Note: The cut edge of the can may be sharp and should be treated with care.

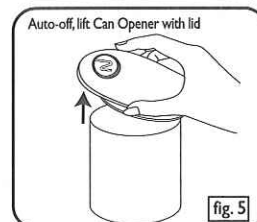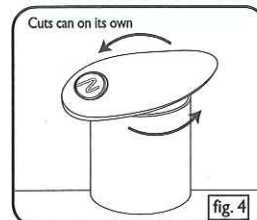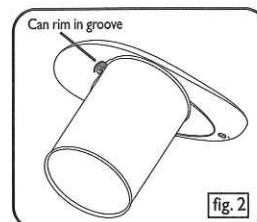


Care and Maintenance


1. If the One Touch™ Can Opener slows during cutting, this may indicate a low battery level and the batteries should be replaced. If the One Touch™ Can Opener stops during operation, see the Trouble Shooting section below.
2. Prior to cleaning the cutter, first slide off the bottom cover and remove the batteries as a safety precaution. Wipe the cutter with a damp cloth or a sponge, using a mild non-abrasive cleaner followed with a clean, dry cloth to dry it completely.

Trouble Shooting

1. If the One Touch™ Can Opener is jammed, push and hold the small black reverse button at the bottom rear of the One Touch™ Can Opener. Continue to hold the button down and the can opener will reverse direction and return to the starting position once the motor has stopped. (See Fig. 6)

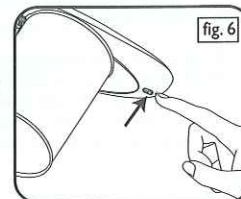

2. If the batteries are drained and the One Touch™ Can Opener cannot be released by pressing the reverse button, insert a screwdriver into the release screw. Gently turn it in a clockwise direction until the can is released. (See Fig. 7)

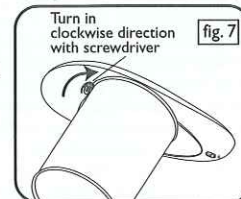

Note: After replacing the batteries following use of the release screw, press and hold the reset button until the One Touch™ Can Opener returns to the start position. You'll know it's in the start position when the motor has stopped.

3. Cans with thick seams, odd shapes, or uneven rims may stall the One Touch™ Can Opener. If this happens, follow procedure #1 above. Start the cutting action just beyond any minor bump or dent in the can.

Note: The One Touch™ Can Opener will not open rimless cans or cans with odd corners.

Technical Specifications

Operate voltage: DC2.4-3V


Battery: 2 x AA alkaline or rechargeable batteries.

Maximum can cutting size in one cycle: diameter 90mm (3.5") (preferred).

ATTENTION! TROUBLE SHOOTING UPDATE:

WEAK BATTERIES may cause the One Touch Can Opener to become stuck or jammed. To detach from can, push and hold the Reset Button on the underside of the unit as shown in Figure 6.

If can opener is still jammed, PRESS and HOLD the RELEASE Button and *at the same time* turn the Stall Release Screw **counter-clockwise** with a Phillips Head screwdriver to release (Figure 8).

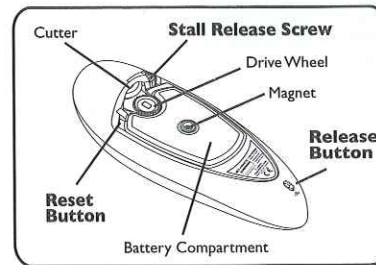

©2006 Daka Development Ltd. All rights reserved.
Design Registered • Patent Pending Printed in China

